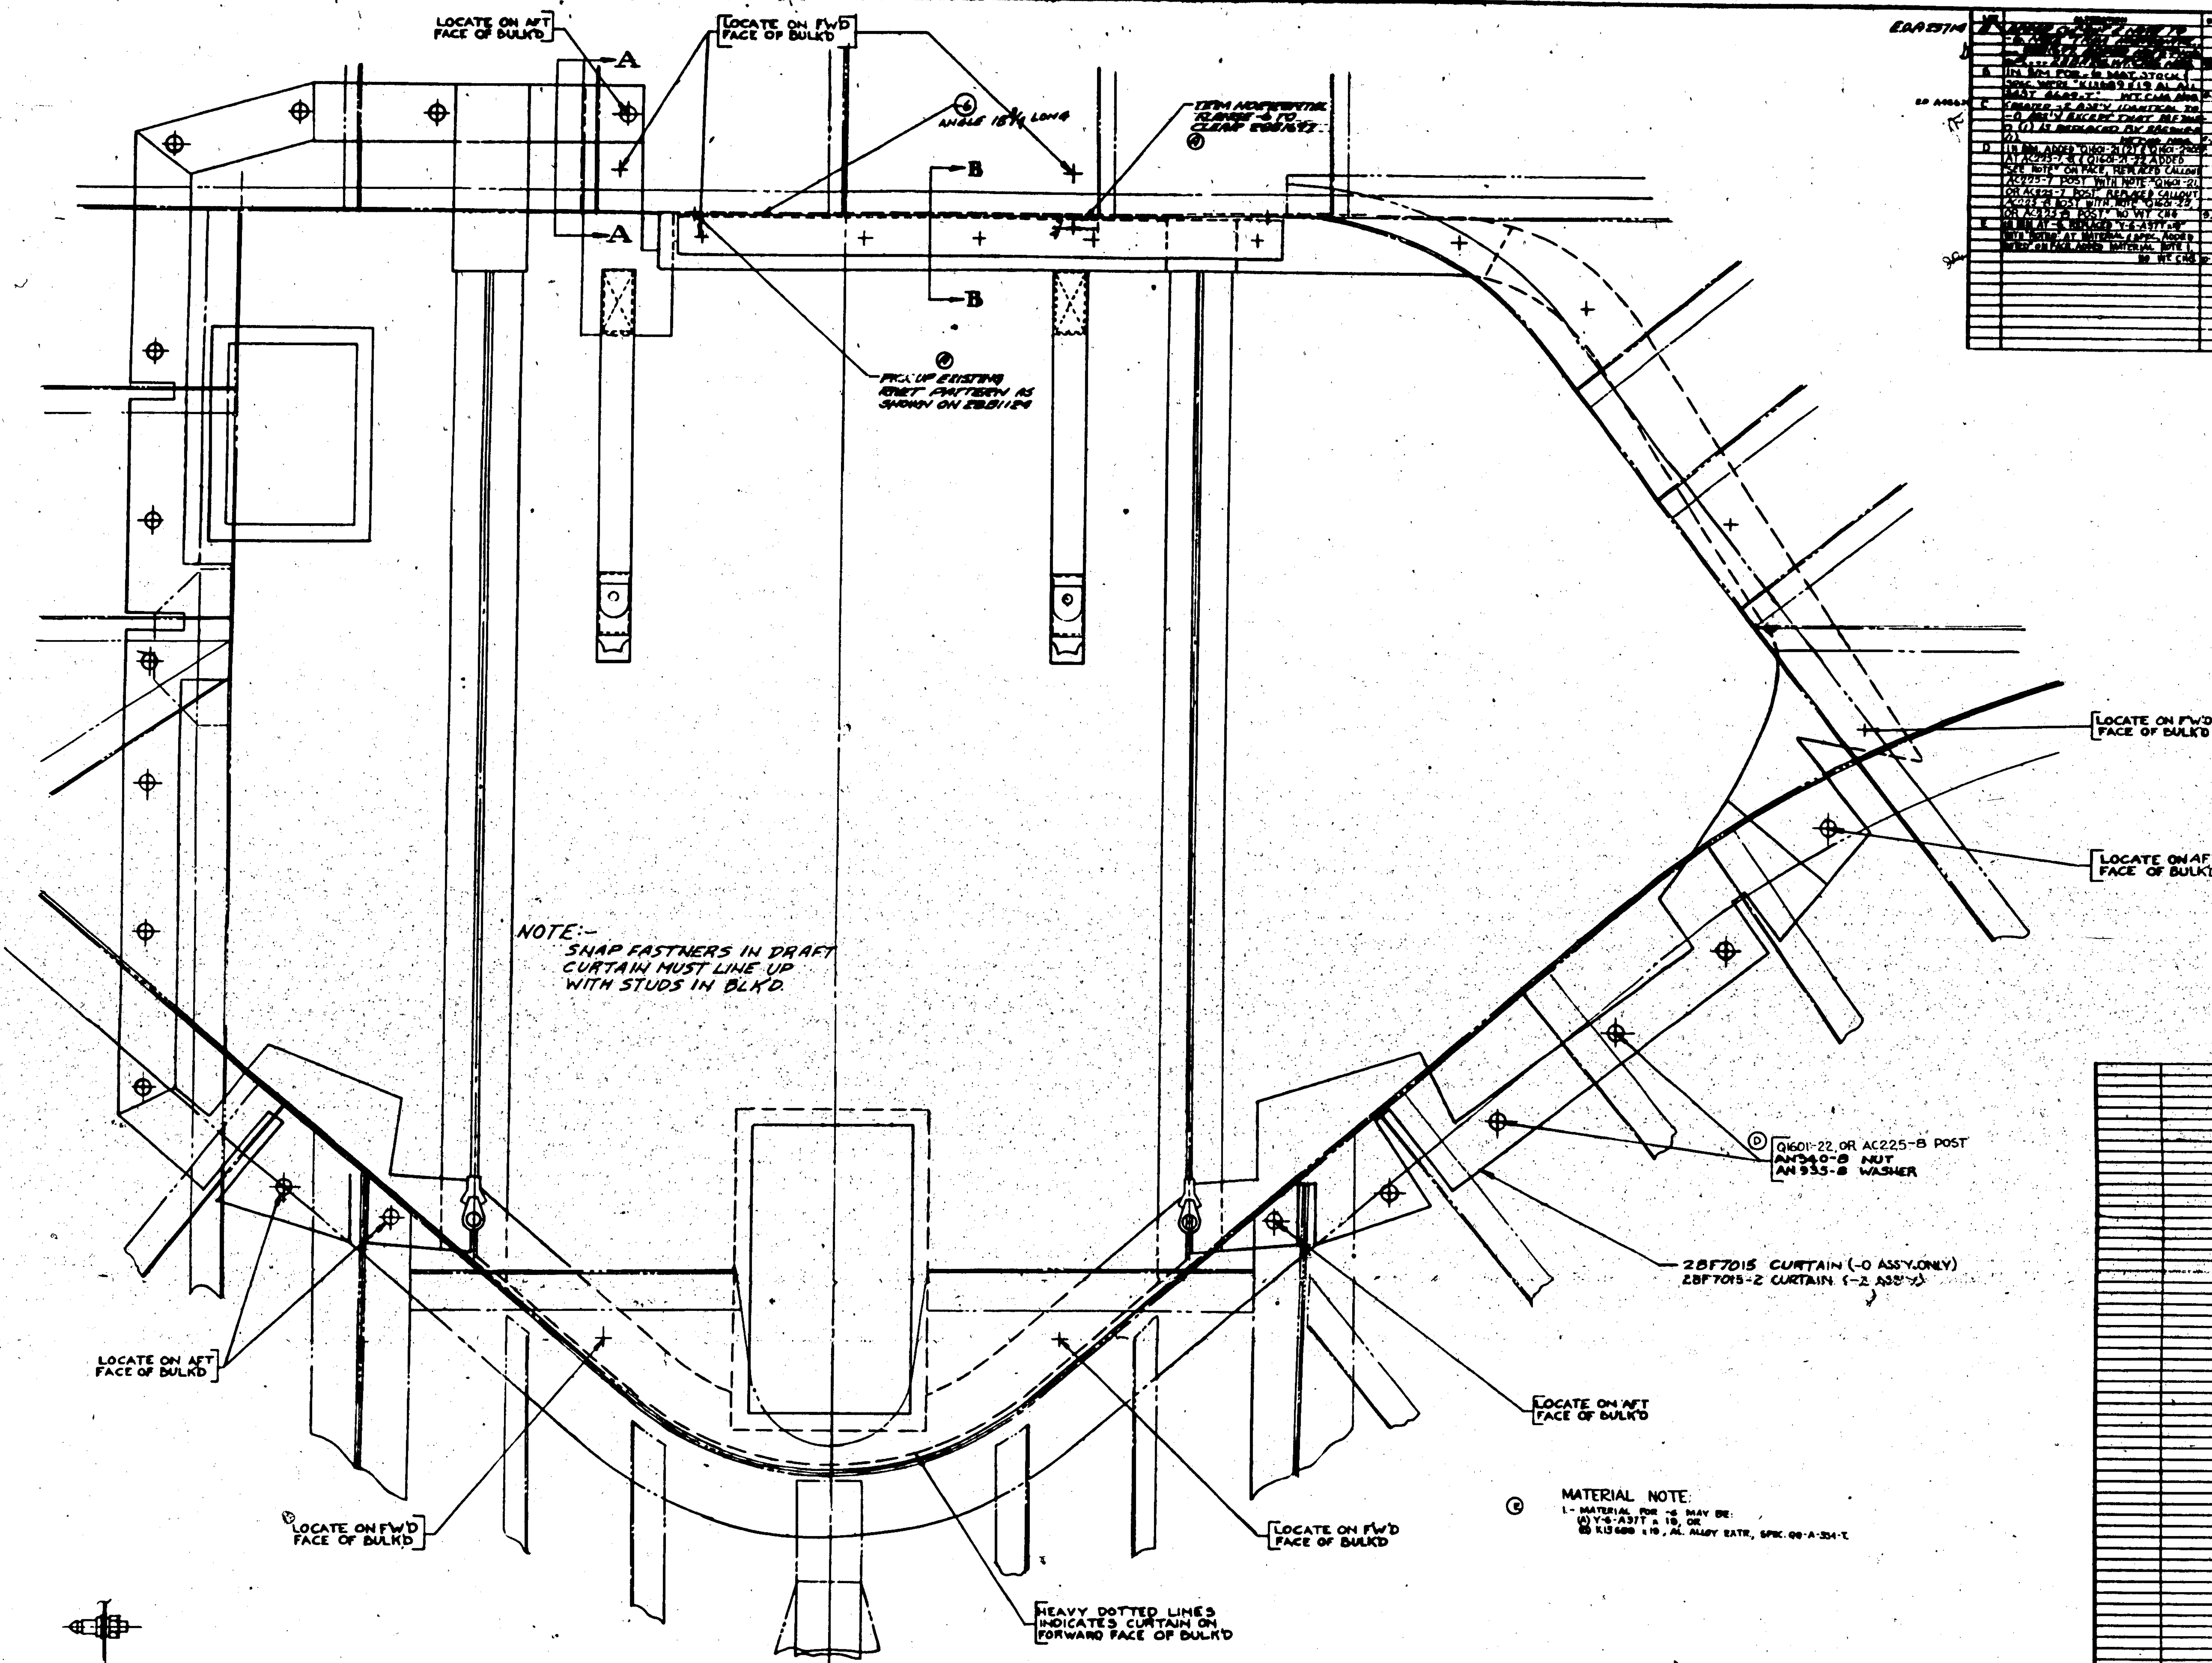


VIEW LOOKING FWD
STA. 1.0

Q1601-21, OR AC225-7 POST
AN340-8 NUT
AN935-8 WASHER

28B1100-13 (REF.)

FORWARD

SECTION A-A
SCALE 12"=1'-0"

AN442AD5 RIVET

(REF.)

FORWARD

SECTION B-B
SCALE 12"=1'-0"

Note! Dwgs. Rush Released 10-27-41

NOTE:
SNAP FASTNERS IN DRAFT CURTAIN MUST LINE UP WITH STUDS IN BULK'D
⊕ STUDS ON AFT SIDE OF BULK'D
+ STUDS ON FWD SIDE OF BULK'D

Q1601-22	(SEE NOTE)	23	23
Q1601-21	(SEE NOTE)	2	2
AN442AD5			
AN935-8		31	31
AN340-8		31	31
AC225-8	(SEE NOTE)		
AC225-7	(SEE NOTE)	2	2
28F7015-2			
28F7015			

NONE — NONE

INSTALL - FURN'S DRAFT CURTAIN STA. 1

CONSOLIDATED AIRCRAFT CORP.

J 28F7016

R

28F7016

H 409